

“Engineered  
for Maximum  
**POWER.**”

**simple · powerful · flexible**

The SG-1/1 suction unit employs the trusted Wassermann low-pressure principle, ensuring efficient operation with minimal air velocity.

**Advantages:** nearly silent and relaxed operation, high suction volume, and no cooling of hands during continuous operation.

**New:** SG-1/1 Comfort features automatic fill level monitoring and auto-start functionality.

## Suction Unit SG-1/1 und SG-1/1 Comfort



Fig.: SG-1/1

### OUR PROVEN FORMULA FOR SUCCESS:

We combine technology, experience, expertise, and team spirit.



### Always here for you

Do you want to request a quote, order products, or have questions about your order, delivery, or warranty?

We look forward to your call and are happy to assist you.

### Info-Hotline

+49 (0)40 730 926-0





[www.wassermann.hamburg](http://www.wassermann.hamburg)



[fb.com/WassermannDentalmaschinen](https://fb.com/WassermannDentalmaschinen)

SCAN ME

# SG-1/1 Comfort Suction Unit

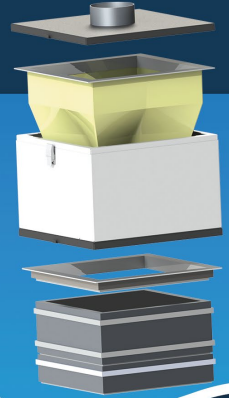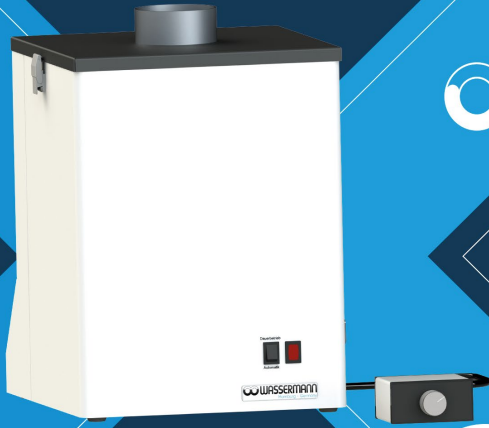

QUALITY MADE IN GERMANY SINCE 1927

## Der Marathonsauger:

Single-station suction using the low-pressure principle, versatile for various applications - from polishing troughs to sandblasters. Durable and robust, made from high-quality metal. Extremely low maintenance and wear-resistant. Easy to clean thanks to low-maintenance surfaces.

## Key Features at a Glance:

- Automatic fill level monitoring
- Auto-start functionality
- Maximum flexibility with a highly compact design
- Nearly silent operation, no cooling of hands
- Brushless motor for extended lifespan
- Suitable for continuous operation
- **Optional:** Stepless power adjustment via rotary knob

### Included in the delivery:

- Power cord with switchable Schuko plug
- Micro fine dust filter bag (yellow), dust class M

## Technical Specifications

Power: 170 W  
Current Consumption: 0.75 A

Suction Power: 500 m<sup>3</sup>/h (free-blowing)  
Dimensions (W x H x D): 260 x 400 x 330 mm

Weight: 9.9 kg  
Sound Level: 59 dB(A)

### SG 1/1

Item No. 140995

### SG 1/1 Comfort

Item No. 140991

### Drehpoti

Item No. 140480

## Info & Consultation:

Wassermann Dental-Maschinen GmbH  
Rudorffweg 15 - 17  
21031 Hamburg, Germany

Tel: +49 (0)40 730 926-0  
www.wassermann-dental.com  
sales@wassermann-dental.com